

# RL208 Series

## MicroBrite™ Bright Field Series

## Product Highlights

- Part of the MicroBrite<sup>™</sup> family of high performance, compact machine vision lights.
- Produces an intensity level of 41kLux (working distance of 180mm).
- Available in several sizes including 50mm, 100mm, 160mm and 200mm.



# General Specifications

	Part Number	Color	24V Current	All Other Controls		
	RL208X-050	365, 375, 385, 395, 405	0.12 A	0.32 A Max		
	RL208X-050	625, 660	0.12 A	0.28 A Max		
	RL208X-050	455, 470, 505, 530, 590, WHI	0.14 A	0.47 A Max		
	RL208X-050	730, 850, 940	0.12 A	0.22 A Max		
	RL208X-100	365, 375, 385, 395, 405	0.24 A	0.58 A Max		
	RL208X-100	625, 660	0.23 A	0.57 A Max		
	RL208X-100	455, 470, 505, 530, 590, WHI	0.27 A	0.79 A Max		
Electrical Specifications	RL208X-100	730, 850, 940	0.24 A	0.43 A Max		
	RL208X-160	365, 375, 385, 395, 405	0.24 A	0.62 A Max		
	RL208X-160	625, 660	0.23 A	0.66 A Max		
	RL208X-160	455, 470, 505, 530, 590, WHI	0.27 A	0.98 A Max		
	RL208X-160	730, 850, 940	0.24 A	0.54 A Max		
	RL208X-200	365, 375, 385, 395, 405	0.36 A	0.87 A Max		
	RL208X-200	625, 660	0.36 A	0.66 A Max		
	RL208X-200	455, 470, 505, 530, 590, WHI	0.40 A	0.98 A Max		
	RL208X-200	730, 850, 940	0.36 A	0.54 A Max		
Normal Operating Temperature	0 - 60°C					
Weight	Varies by size					
Standard Cable Information	2 m long -0/+150 mm (80" -0/+6") - 105°C rated PVC jacket, foil shield with drain.					
Photobiological Risk Factor	Exempt Applicable Wavelengths; 850, 940  Group 1 (Low Risk) Applicable Wavelengths: 455, 470, 505, 530, 590, 625, 660, 730, WHI					
	Group 2 (Moderate Risk) Applicable Wavelengths: 365, 375, 385, 395, 405					
Compliance	CE, RoHS, IEC 62471					

2

**IP Rating** 

IP50

Lumen Maintenance

L70 = 50,000 Hours

"X" in part number refers to lens option. See part number key for more information.

## Part Number Key

Model	Lens Type	_	Inner Diameter (mm)	Peak Wavelength	Connector/ Control	_	Alternative Connector
RL208	Х	-	XXX	XXX	XX	-	XXX
RL208	М		050	365 (UV)	C1		M81
	(Medium)		100	375 (UV)	C5		M121
	W <sup>3</sup>		160	385 (UV)	IC		
	(Wide)		200	395 (UV)	13		
				405 (violet)	13S		
				455 (royal blue)	24 <sup>2</sup>		
				470 (blue)			
				505 (cyan)			
				530 (green)			
				590 (amber)			
				625 (red orange)			
				660 (red)			
				730 (IR)			
				850 (IR)			
				940 (IR)			
				WHI (white)			
EX: RL208M-050WHIC1 RL208W-200625IC-M12			<sup>1</sup> Available with IC, I3, and I3S options only <sup>2</sup> The 24 V version will have a lower output intensity by  ~10-15% and operate at a temperature ~10-15% higher				Beam Angle (FWHM): Medium = 21°
			than other option <sup>3</sup> Not available with				Wide = 32°

See website product page for in-stock product numbers.

Shipping: Stock Products: within three days

Build-to-Order Products: within one to three weeks

# Control Specs

C1 Connector  For use with: DCS Series Controllers	C5 Connector  For use with: Pulsar 320 Strobe Controller.	ICS 2 (IC)  Continous in-line controller  Powered with:	ICS 3 (I3)  Combination strobe/continous in-line controller	ICS 3S (I3S)  Default-OFF strobe/continous in-line controller	24 Flying/tinned leads Powered with: 24V power supply
		24V power supply	Powered with: 24V power supply	Powered with: 24V power supply	24v power supply

## Change Notice

PCN No: 132

Date Issued: June 24, 2016

Notice Type: Product Revision Change

Product Type: RL208

Change Notification Summary

In an effort to improve our products, Advanced illumination (Ai) will update the LEDs used in the RL208 design. This change will result in a brighter, more uniform light at the same price\*. Customers may still buy the current revision of this model until July 22th of 2016. After that time, orders for these products will be converted to their respective RL208 Revision A models.


This LED change will result in additional wavelengths being available: 365nm, 375nm, 385nm, 395nm, 405nm, 470nm, 505nm, 590nm, 660nm, 730nm, 850nm and 940nm. Additionally the white LED color temperture will be changing from 6100K to 5500K.

\*UV wavelengths (365nm, 375nm, 385nm, 395nm & amp; 405nm) will be sold a higher list price, which will be released at the time of product introduction.


Please contact your Ai Sales Representative if you have any questions.

PCN 132 RL208


## [ RL208-050 ]

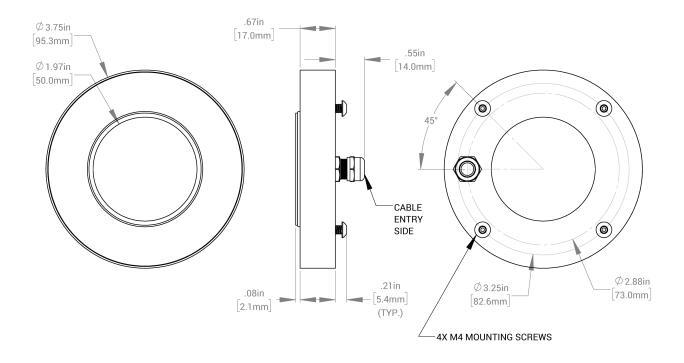


## [ RL208-100 ]

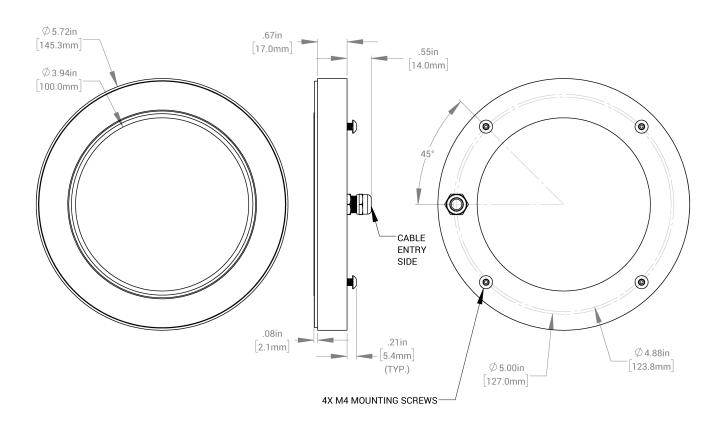


## [ RL208-160 ]

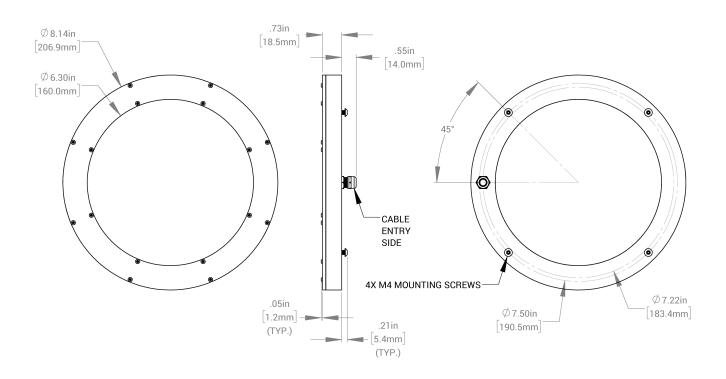

## [ RL208-200 ]

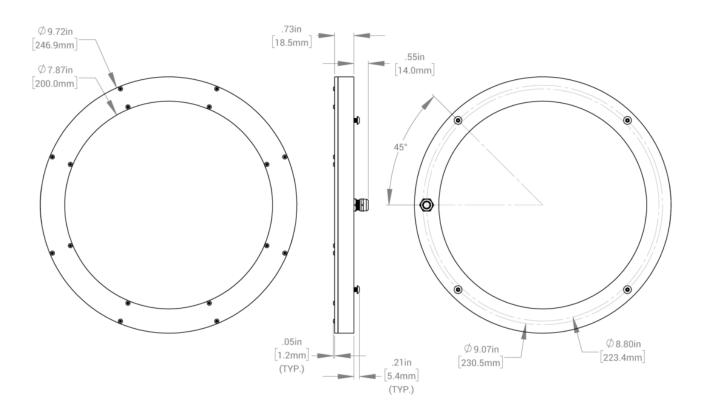


#### Standard Flying Lead Functions for 24V, IC, I3 and I3S Control Options

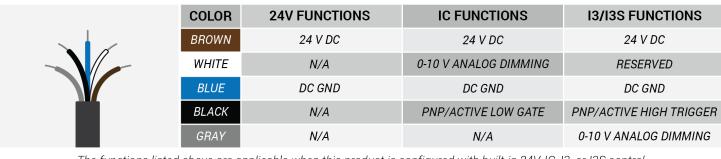

The functions listed above are applicable when this product is configured with built-in 24V, IC, I3, or I3S control, without the optional A-coded 5-position Male M12 or A-coded 4-position Male M8 connector.

#### M12 Connector Pinout Functions for 24V, IC, I3 and I3S Control Options

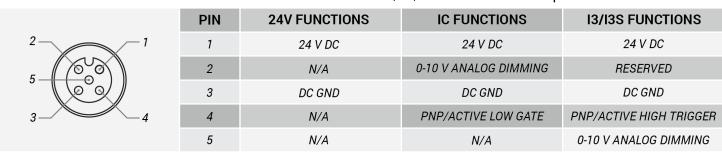

The functions listed above are only applicable when this product is configured with built-in 24V, IC, I3, or I3S control, with an A-coded 5-position Male M12 connector.


#### M8 Connector Pinout Functions for 24V, IC, I3 and I3S Control Options

	PIN	24V FUNCTIONS	IC FUNCTIONS	13/13S FUNCTIONS
3——————————————————————————————————————	1	24 V DC	24 V DC	24 V DC
	2	N/A	0-10 V ANALOG DIMMING	0-10 V ANALOG DIMMING
4——2	3	DC GND	DC GND	DC GND
	4	N/A	PNP/ACTIVE LOW GATE	PNP/ACTIVE HIGH TRIGGER

The functions listed above are only applicable when this product is configured with built-in 24V, IC, I3, or I3S control, with an A-coded 4-position Male M8 connector.


For details on operating configurations without built-in control (C1, C5, Q1, and Q4 control, when available), please refer to Advanced illumination's controller manuals.

# Intensity Distribution

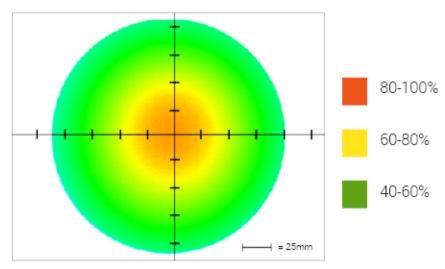

Optical measurement taken using RL208M-100WHIIC @ 300mm

## Area of Illuminance & Intensity

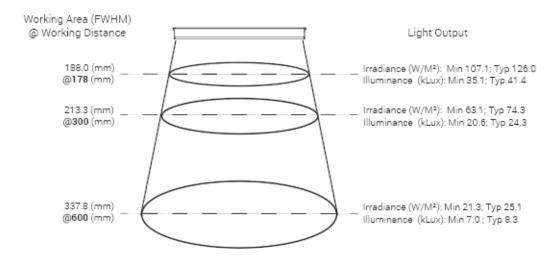

#### Area of Illuminance & Intensity for RL208M-WHI

Medium Lens

Part Number	Working Distance (mm)	Illuminance (klux)	Irradiance (W/m²)	FWHM Diameter (mm)
	100	57.7	177.0	101.6
RL208M-050	300	15.7	47.7	177.8
	600	4.50	13.4	330.2
	178	41.4	126.0	188.0
RL208M-100	300	24.3	74.3	213.3
	600	8.30	25.1	337.8
	230	22.0	70.0	279.4
RL208M-160	300	20.0	62.0	292.1
	600	9.0	27.0	386.0
	300	15.0	46.0	342.9
RL208M-2001	450	11.3	33.2	386.0
	600	8.0	23.0	431.8

<sup>1</sup> Values shown represent an estimated 30% increase to prior version.

## Warranty Information

Every Advanced illumination, Inc. (Ai) product is thoroughly inspected and tested before leaving the factory. Products are warranted to be free of defects in workmanship and materials for a period of FIVE YEARS from the original date of purchase. Should a defect develop during this period, customers may return the complete product, freight prepaid, to one of Ai's distributors or to the Ai factory. All product warranty returns require a Return Merchandise Authorization (RMA) number which is obtained from Customer Service. The RMA number must be clearly marked on the outside of the package. Ai will inspect the unit, and if a defect is found will, at our option, repair or replace the product without charge. Ai disclaims liability for any implied warranties, including implied warranties of "merchantability" and "fitness for a specific purpose." For products under warranty that have since been discontinued, Ai will make an effort to replace with equivalent parts; for circumstances that do not allow for equivalent replacement, Ai reserves the right to repair or replace these products with an updated version. Ai cannot be held responsible for the unauthorized or inappropriate use of its products. Any unauthorized repair or modifications will result in a voided warranty.

No Liability for Consequential Damages: In no event shall Ai be liable for any consequential, special, incidental, or indirect damages of any kind arising from the sale or use of the products.

### Electromagnetic Compatibility

This product was tested and complies with the regulatory requirements and limits for electromagnetic compatibility (EMC) as stated in the product specifications. These requirements and limits are designed to provide reasonable protection against harmful interference only when the product is operated in its intended industrial electromagnetic environment. To minimize the potential for electromagnetic interference or unacceptable performance degradation, install and use this product in strict accordance with the instructions in the product documentation.

#### Customer Service

For information on existing orders, or to make an order adjustment, contact us Monday through Friday 8:00 am to 5:00 pm ET or send an email to orders@advancedillumination.com.

## Company Information

## **Advanced Illumination**

440 State Garage Road, Rochester, VT 05767

Phone: 802.767.3830 Fax: 802.767.2636

Email: info@advancedillumination.com

Web: advancedillumination.com

© 2021 Advanced illumination Inc. All rights reserved